



Form No. 104692

Operating & Installation
Instructions for:

	300446
300132	300447
300140	300448
300273	300449


RETAINING RING

PART NUMBER 11034

INSTALLATION INSTRUCTIONS

The Retaining Ring (Part No. 11034) must be installed with the flat side, or sharp edge, placed toward the retainer as shown.

IMPORTANT: Correct installation of the retaining ring can determine how long the air/hydraulic pump will run without malfunction.

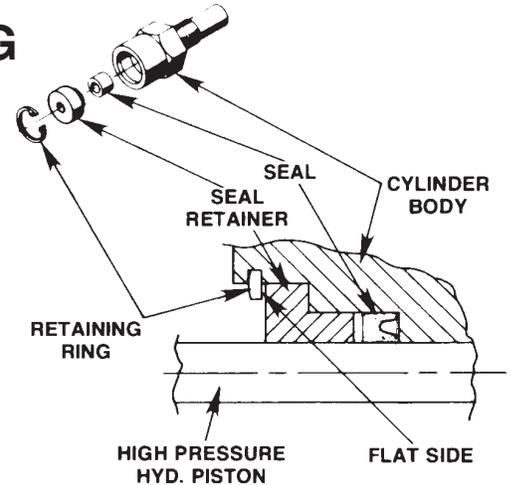

Sheet No. 1 of 1

Rev. 2 Date: 29 Oct. 1996



Form No. 104692

Operating & Installation
Instructions for:

	300446
300132	300447
300140	300448
300273	300449


RETAINING RING

PART NUMBER 11034

INSTALLATION INSTRUCTIONS

The Retaining Ring (Part No. 11034) must be installed with the flat side, or sharp edge, placed toward the retainer as shown.

IMPORTANT: Correct installation of the retaining ring can determine how long the air/hydraulic pump will run without malfunction.

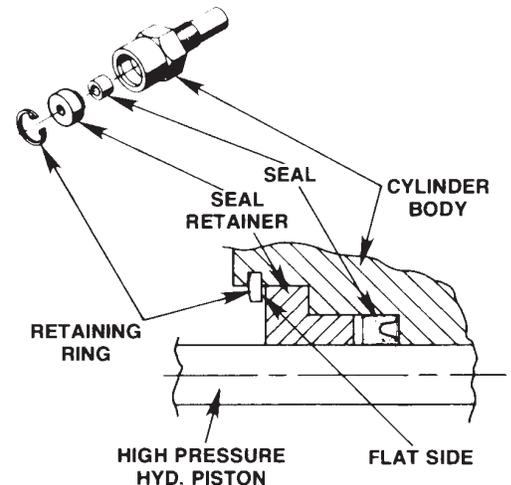

Sheet No. 1 of 1

Rev. 2 Date: 29 Oct. 1996